


ANLAN

always for you

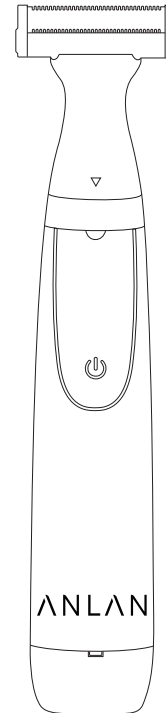

www.anlan.com

Designed by ANLAN

Made in China

保証書

商品名	ANLAN 4in1 ボディシェーバー		型式	RE-8868
保証期間	通常保証 1年間			
お客様	お名前		ご住所	
	電話		メールアドレス	
購入元				



カスタマーサービスメールアドレス：sale@anlan.co.jp

- 保証期間：通常の保証期間は、お買い上げ後1年間です。
- 本書は再発行できませんので、大切に保管をお願いします。
保証期間中に、万一故障がおきた際は、ご案内いたしますフォームにご記載頂く必要がございます。
- お預かり致しましたお客様の情報は修理対応にのみ利用し、第三者に譲渡・提供することはありません。
- 保証期間を経過した場合は、交換を承ることができません。



販売元：ANLAN Japan株式会社


<https://www.anlan.co.jp>

JP

EN

ANLAN 4in1 ボディシェーバー

取扱説明書

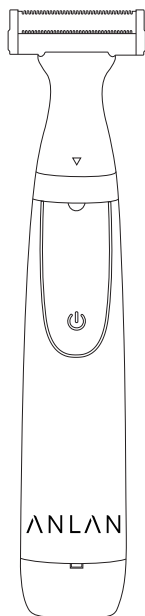

- ・この度は、ANLAN 4in1 ボディシェーバーを購入上げいただき、誠にありがとうございます。
- ・ご使用する前に、取扱説明書をよく読みのうえ、正しく安全にお使いください。取扱説明書は、保証書を兼ねています。大切に保管してください。
- ・ご使用する前に、「安全上のご注意」を必ずお読みください。

安全上のご注意



・お使いになる方や他人への危害、財産への損害を未然に防ぐため、必ずお守りいただくことを説明しています。次の内容をよく理解してから本文をお読みになり、記載事項は必ずお守りください。

 警告	誤った取り扱いをすると、重症を負う恐れがある内容を示しています。
 注意	誤った取り扱いをすると、傷害を負う恐れや物の損害が発生する恐れがある内容を示しています。
 警告	次のような方は、使用しないでください。 ●心臓疾患の方 ●顔面の神経障害のある方 ●出血性疾患・血友病疾患などの血液異常の方 ●幼児や成長期の子供、および自分で意思表示のできない方 ●アレルギー体質の方 ●敏感肌の方 ●皮膚病およびヒビドー性皮膚炎の方 ●薬を服用中の場合、疲労の激しい場合 ●皮膚炎・過度の日焼けなど、皮膚に異常のある場合
 注意	次のような部位は、使用しないでください。 ●大陰嚢以外の性器、肛門、粘膜 ●傷、湿疹、ほくろ、あざ、いぼ、吹き出物などとその周囲 ●皮膚のたるんだ部分 ●肌に傷やしんしんはれものなどのある部位 ●当日の脱毛処理をした部位 ●上まぶた
 注意	本体について ●乳幼児の手の届く場所に保管したり、使用させないでください。また、本機械は家庭での使用に限りです。 ●機械箔、刃、または切断ユニットに損傷がある場合は、使用を控えてください。怪我をする恐れがあります。 ●機械を直射日光の当たる場合は、極端な温度環境、又は高温の表面に放置しないでください。


注意

- 本機械は防水性能がIPX6規格に準拠しており、シャワー中に水しぶきがかかる環境で使用したり、蛇口の下で洗い流したりすることができます。でも、機械全体を水中に浸けることは禁止されています。
- 使用時や使用后、皮膚に異常があらわれた場合は使用を中止し、皮膚科医に相談してください。
- 使用期間には、本製品に 破損、故障、変形、電池異常が発生した場合には、本製品の使用を中止してください。
- 取扱説明書に記載されている用途以外には使用しないでください。
- 発火、発熱、破裂の原因になります。この製品を使用する時には、強い電磁場（誘導加熱調理器など）から離してください。
- 分解や修理、改造はしないでください。火災、感電、ケガの原因になります。誤って使用・分解・改造されたための怪我、故障、破損等に関しましては保証対象外となります。

各部のなまえ

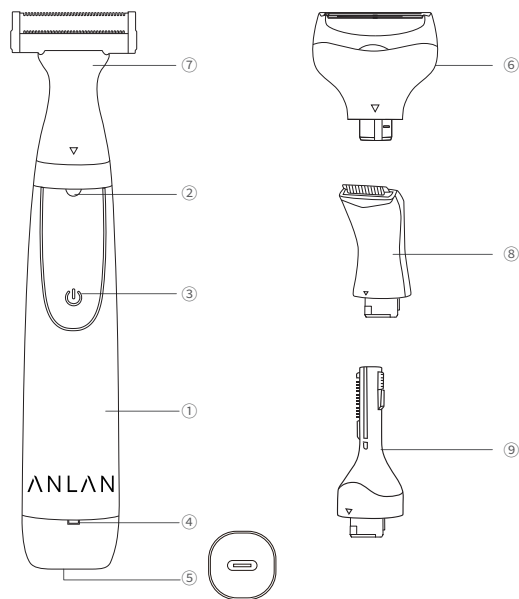


10




11



12



13



14



15

- ①本体
- ②LED 照明ランプ
- ③電源スイッチ
- ④充電指示灯
- ⑤USBポート
- ⑥ネット刃
- ⑦T 型刃
- ⑧トリマー刃

- ⑨眉毛シェーバー
- ⑩ネット刃カバー
- ⑪T 型刃コーム（1mm、3mm、5mm）
- ⑫トリマー刃コーム（5mm）
- ⑬剃刀コーム（3mm 及び 5mm）
- ⑭Type-C 充電ケーブル
- ⑮お手入れ用ブラシ

商品仕様

商品名	ANLAN 4in1 ボディシェーバー
型式	RE-8868
型番	RE-8868-PK
本体サイズ (T 型刃付き)	約167×41×33mm
重量 (本体+替えヘッド+コーム)	約138g
バッテリー	500mAh
定格電圧及び電流	5V --- 1A
作業時間	約 1.5 時間
フル充電時間	約 1.5 時間
回転スピード	6500RPM/分の回転スピード
出力効率	3W
防水等級	IPX6
保証期間	一年間
材質	ABS
認証	CE, FC, ROHS

セット内容



本体×1



ネット刃×1



T型刃×1



トリマー刃×1



眉毛シェーバー×1



ネット刃カバー×1



T型刃コーム
(1mm、3mm、
5mm) ×1



トリマー刃コーム
(5mm) ×1



眉コーム (3mm及
び5mm) ×1



お手入れ用
ブラシ×1



Type-C充電
ケーブル×1







取扱説明書×1

基本の使い方

アタッチメントの取り外し / 取り付け：

1. アタッチメントを回し、矢印が一致するまで回した後、持ち上げて機器から離してください。(図 3)
 2. 新しいアタッチメントを、矢印が一致するように位置決めし、機器に接続してください。左に回して締めることで、位置がロックされます。(図 3 - 図 6)
- ※アタッチメントの替えは、必ず機器の電源を切った状態で行ってください。

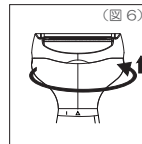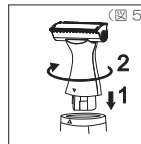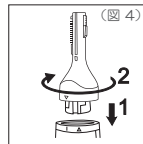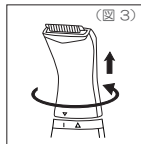

コームの使用法




コームの取り付けまたは取り外しは、必ずアタッチメントをボディシェーバー本体に接続した状態で行ってください。

取り付け方法：

コームをヘッドの背面に当てがい、軽く力を加えてはまるまで押し込んでください(図 7 - 図 10)。

取り外し方法：

軽くヘッドから引っ張って取り外してください。

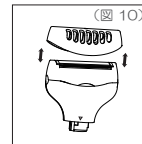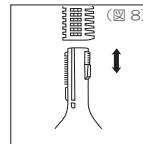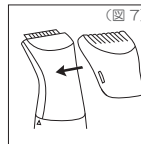


T 型刃：

1mm、3mm、5mm のコームが付属していますので、自然な長さを保ったり毛量を減らしたりしたい場合はご使用ください。顔以外にも、全身で使用する事ができます。

腋下や「VIO」などの狭い部位での使用を推奨します。

コームの取り外し方法については、図 5 を参照してください。

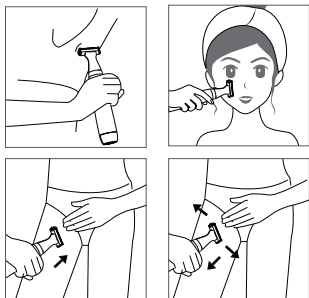

肌を手で伸ばしてください

トリマー刃：

「VIO」部位に適しています

1. トリマー刃を本体に取り付けてください。

2. IゾーンとOゾーンをカットする際は、必ずコームを取り付けてください。図 7 を参照してください。

※Vゾーンについては、コームを取り付けなくても、使用できます。

3. 手で肌を軽く伸ばしながら、トリマー刃を肌の表面に沿ってゆっくり移動させてください。特に肌がたるんでいる部分はしっかり伸ばすようにしてください。


※ 肌をしっかりとつかまれるようにしてください。

※ 強く押しつけることなく、ゆっくりと動かしてください。

※ 同一の部位を何度もこすらないようにしてください。


※ 叩くような使い方はされないようにしてください。

(肌を傷つけたり、炎症や出血などの原因となりますので)

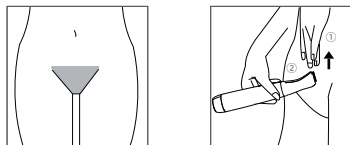

コームを組み合わせなくても使用できます。


肌を手で引き締めてください。

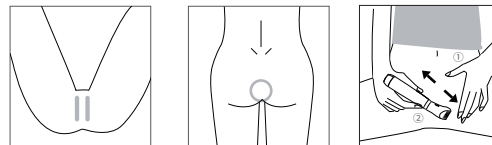

IゾーンとOゾーンには必ずコームを取り付けてください
肌を手で伸ばしてください

ネット刃：

1. 本製品を使用する前に、手で肌を軽く引き締めてください。(たるんだ肌をしっかり伸ばして)
2. ネット刃を軽く押し当て、毛の生える逆方向に移動させてください。
(※肌を強く押さえないでください。そうすると損傷や故障の原因となります。)
3. 全身で使用する事ができますが、腕、脚、体などの広い部位での使用を推奨します。

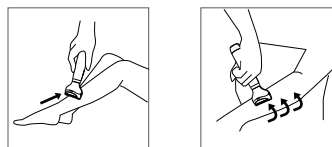

肌を手で引き締めてください

眉毛シェーバー：

ヘッドの短辺は、眉毛のラインや細かい部位のケアに使用します。コームと組み合わせて使用することができます。



ヘッドの長辺は、顔の広い毛髪に適しています。コームと組み合わせて使用することができます。特に顔のひげや眉毛などの狭い部位での使用を推奨します。



※コームの取り付けと取り外し方法については、図 8 を参照してください。


充電について

本製品の充電時間は約1.5時間で、入力電圧は直流5Vです。

Type-C充電ケーブルを充電ポートに差し込みます。

充電中：付属のType-C充電ケーブルを充電ポートに差し込むと、充電指示灯が赤色に点灯します。

充電完了：充電が完了すると、指示灯が青色に変わります。ご使用後は速やかに電源を切ってください。

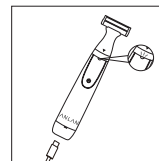

お手入れについて


ボディシェーバーは定期的に清掃してください。

清掃を行う前に、必ずスイッチが「オフ」の状態になっていることを確認してください。

ブラシを使用して清掃してください。除毛器本体を水に浸けないでください。

潤滑性を維持するため、密閉式のブラシを使って清掃ユニットを掃除してください。

また、電源ハンドルについた髪の毛は、しっかりブラッシングした後、吹き飛ばしてください。

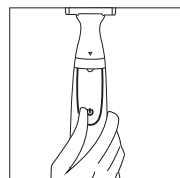

電源のオン/オフとLEDライト


電源を入れる：スイッチを素早く2回押してください。本体が作動し始めます。

LEDライトを点ける：本体作動中にもう一度スイッチを押すと、LEDライトが点灯します。

電源を切る：ライト点灯中にもう一度スイッチを押すと、電源が切れます。

水による洗浄方法

お使いのアタッチメントには防錆処理が施されたステンレス製の切断刃が搭載されています。必要に応じて、切断刃を流水の下で洗浄することができます。
ボディシェーバー本体に接続した状態でアタッチメントを洗浄しないでください。
清掃時は、必ず刃の部分を下に向けて行ってください。
機器が完全に乾燥した後のみ、再び使用してください。
※ 機器またはそのアタッチメントに、強酸や腐食性の洗剤を使用しないでください。
※ アタッチメントを固定する際は、強い力を加えたり硬い物を使用したりしないでください。

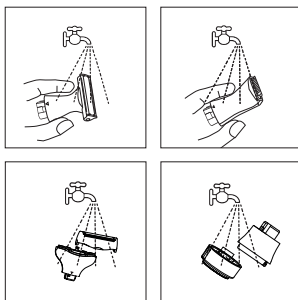

よくある質問

よくある質問	解決方法
機器に反応がありません	機器の電池残量が不足していないか確認し、充電後に再試行してください。問題が解決できない場合は、販売者に連絡してサポートを受けてください。
充電できない	充電ケーブルの各接続部分がしっかり接続されているか確認してください。
	付属の充電ケーブルを使用しているか確認してください（一部の Type-A To Type-C ケーブルにも対応しています）。
	充電に使用している電源回路が通電しているか確認してください。
	充電口に異物が詰まっていないか確認してください。 問題が解決できない場合は、販売者に連絡してサポートを受けてください。


本製品の放棄について



この製品には、リチウムイオン電池を使用しております。リチウムイオン電池はリサイクル可能な貴重な資源です。ご使用済み製品の廃棄に際しては、リサイクルボックス設置の協力店または、特定の回収窓口へお持ちください。

ANLAN Shining LED Electric Shaver

USER MANUAL

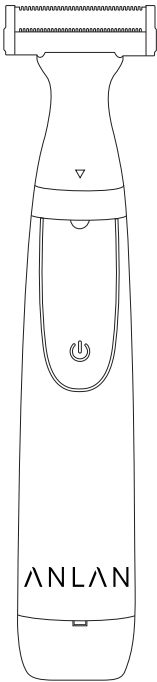

Thank you for purchasing the ANLAN Shining LED Electric Shaver. Please read this user manual carefully before use and retain it for future reference. This manual also serves as your warranty document; please keep it safe.



Warranty Certificate

Product Name	ANLAN Shining LED Electric Shaver
Model Type	RE-8868
Warranty Period	1 Year Warranty
Customer Information	Name:
	Phone Number:
	Address:
	Email:
Place of Purchase	


SAFETY PRECAUTIONS

- 1. This device is not a toy and is not intended for children. This device is for household use only.
- 2. Do not use the device if it has damaged foil, blade, or cutting element to avoid possible injury.
- 3. Do not expose the device to direct sunlight, extreme temperatures, or hot surfaces.
- 4. The device is waterproof according to IPX6 standards and can be exposed to splashing water in the shower and rinsed clean under the tap. However, the device should not be completely submerged in water.

Product Features and Components

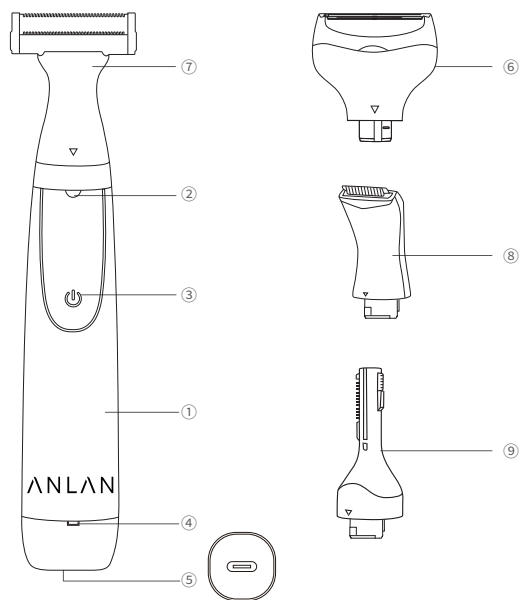


10



11



12



13



14



15

1. Main unit
2. LED light
3. Power button
4. Charging indicator light
5. USB charging port
6. Curved Blade
7. T-shaped blade
8. Intimate area blade

9. Eyebrow blade
10. Curved blade protective cover
11. T-blade guide combs (1mm, 3mm, 5mm)
12. Intimate area guide comb (5mm)
13. Eyebrow guide combs (3mm and 5mm)
14. Type-C charging cable
15. Cleaning brush

Specifications

Product Name	ANLAN Shining LED Electric Shaver
Model Type	RE-8868
Model Number	RE-8868-PK
Dimensions (with T-blade)	Appr.167*41*33mm
Weight (main unit + attachments + combs)	Appr.138g
Battery Capacity	500mAh
Input Voltage/Current	5V/1A
Operating Time	about 90 min
Charging Time	Appr. 1.5 hours
Material	ABS
Rated Power Input	3W
Water Resistance SKU	IPX6

Pack List



Main unit×1



Curved Blade×1



T-shaped blade×1



Intimate area blade×1



Eyebrow blade×1



Curved Blade Protective Cover×1



T-blade guide combs (1mm, 3mm, 5mm)×1



Intimate area guide comb (5mm)×1



Eyebrow guide comb (3mm and 5mm)×1



Cleaning brush×1



Type-C charging cable×1




User manual×1

How to Use the Product

【Getting Started】

1. Quickly press the power button twice to switch on the device. Press once more to activate the LED light. Press again to turn the device off.
2. Charge the product for approximately 1.5 hours using a 5V DC input.
3. Connect the Type-C charging cable to the port. A red light indicates charging; a steady blue light indicates charging is complete. Disconnect from power once fully charged.




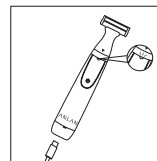


【Changing Attachments】

The trimmer comes with interchangeable heads for shaving and trimming. Attachments should only be changed when the device is switched off.


【To Remove/Attach an Accessory】

1. Rotate the head until the arrows align, then lift it off the device. (see Fig. 3)
2. Align the new attachment with the arrows and rotate left to lock in place (see Fig. 3-6).

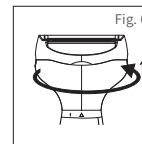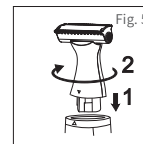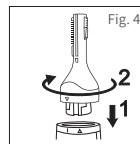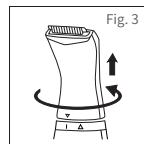

[Using Guide Combs]

Only install or remove guide combs when the attachment is already fitted on the device. To install, place the comb onto the back of the trimmer head and gently press until it clicks into place (see Fig. 7–10). To remove, gently pull the comb away from the trimmer.

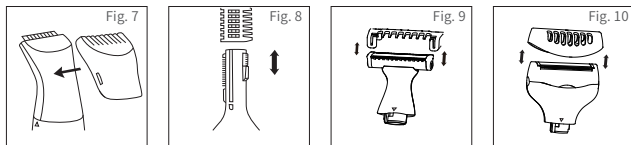

[Cleaning with Water]

The stainless steel blades are rust-resistant and can be rinsed under running water if desired.

Do not rinse attachments while they are connected to the device.


Always point the blade area downwards when cleaning.

Ensure the device is completely dry before reuse.

※Important:

Do not use strong acids or corrosive cleaners.

Avoid using force or hard objects on the attachments.

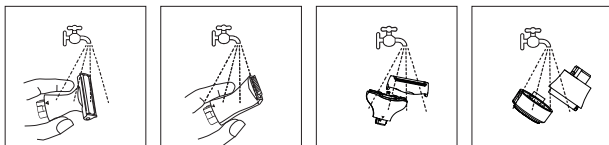

[Instructions]

T-shaped blade

1. Since it comes with 1mm, 3mm, and 5mm limiters, it can be used not only on the face but also on the entire body when you want to maintain natural length or reduce hair volume.

Recommended for use in confined areas such as underarms and the "VIO" area.

3. Refer to Fig. 5 for disassembly of the limiter comb.

Private razor:

(Suitable for "VIO" areas)

1. Attach the trimming blade to the main unit.
2. When trimming the I and O zones, always attach the limit comb. The V zone can be trimmed without the limit comb.
3. Gently stretch your skin with your hands and slowly move the shaver head along the skin surface, ensuring that any loose skin is fully stretched.

Three-Dimensional Curved Blade

1. Before using this product, gently stretch your skin with your hands (to fully stretch any loose skin).
2. Gently press the shaver against the direction of hair growth.
(※ Avoid applying pressure to the skin to avoid damage or malfunction.)
3. This product can be used all over the body, but is recommended for use on wide areas such as the arms, legs, and body.

Eyebrow Shaver

1. The short side of the shaver head is for eyebrow lines and fine areas and can be used with the limit comb.
2. The long side of the shaver head is for wider facial hair and can be used with the limit comb. This is recommended for use on narrow areas such as beards and eyebrows.

※ See Fig. 8 for attaching and detaching the limit comb.

Cleaning and Maintenance

Clean your personal trimmer regularly. Before cleaning, make sure the switch is in the "off" position. Use a brush for cleaning. Never expose the trimmer body to water.

To maintain lubrication, use a closed brush to clean the unit.

Thoroughly brush and blow out any hair debris from the power handle.

Troubleshooting/Usage Questions

Common Problems	Solutions
The machine is unresponsive	Check if the trimmer is low on battery. Charge it and try again. If this still doesn't work, please contact the seller for further support.
Unable to charge	Check that all connections on the charging cable are secure.
	Check that you are charging with the included charging cable (some Type-A to Type-C cables are also supported).
	Check that the charging power circuit is connected.
	Check if there are any foreign objects blocking the charging port.
	If this still doesn't work, please contact the seller for further support.

Recycling and Disposal

The battery in this device may contain pollutants that could pollute the air. When discarding this device, remove the battery. Do not dispose of the device and battery directly in a fire or household waste. To further protect the environment, please follow your local government's battery disposal regulations.